

Barcode Scanner

Quick Start Guide


Contents:● Barcode Scanner

- Hand rope
- Quick Start Guide
- Type-C Cable
- Receiver
- Protective Silicone Cover

No.:1230353011 V1.0


Charging Method

Insert charging cable, connect to a computer USB port or use a power adapter with a USB port for charging.

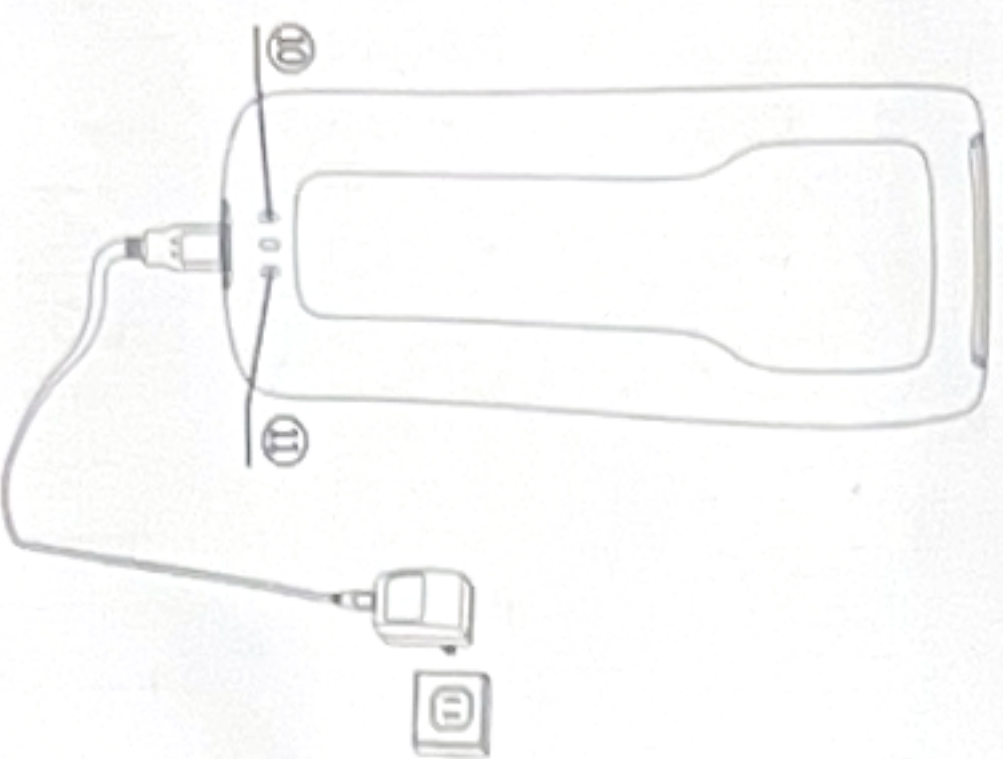

⑩The blue indicator in charge is steady on.
⑪ Fully charged red indicator is steady on.
Note: This product uses 5V voltage power supply, please do not other voltage to supply power to scanner.

Scanner Overview

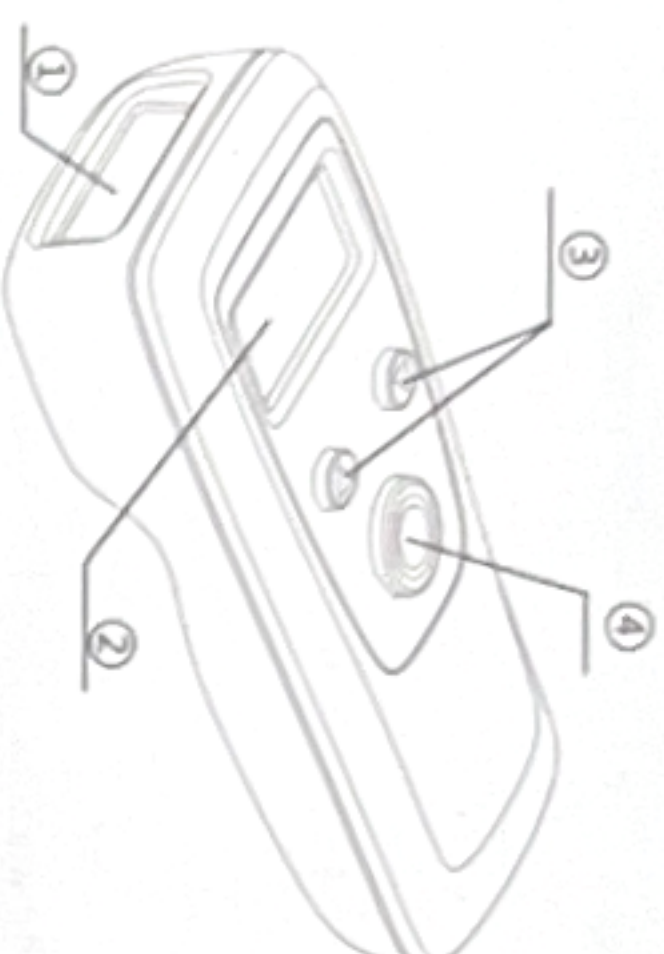

Barcode Scanner

- ① Scanning window
- ② Display screen
- ③ Guide button
- ④ Scanning button



Receiver

Note: Product appearance depends on goods.

Receiver Pairing

To pair the scanner with receiver, follow the steps below:

- ①Scan the “Pairing Barcode” below to enter 2.4G pairing mode.




Paired Receiver

- ②Insert the receiver as above picture. About 1-10s, when you hear a sound, it means that the pairing is successful, and the scanner exits the pairing mode.



Power on and off

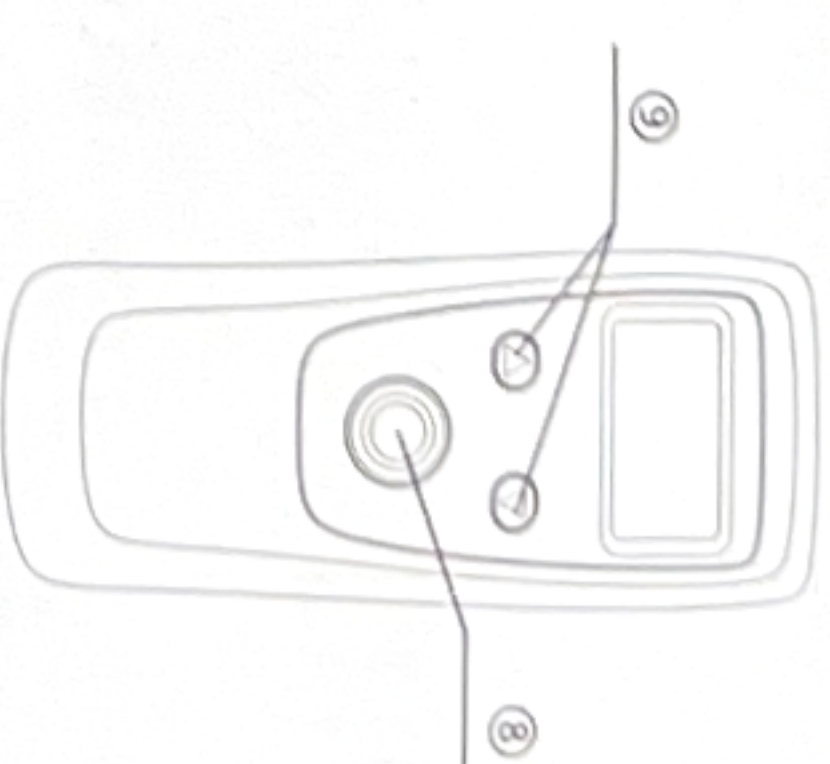

- ⑧ Turn on: press the scan button to start the machine.
- ⑨ Turn off: press two guide buttons at the same time to quickly shut down.

Troubleshooting Q&A:

Q1:After scanning data, the scanner have sound of “du du du” three times means the data not uploaded.

A1:Pair again following “Pairing” process.

Q2:No data upload after scanning, but no warning tore.

A2:Scan “Realtime mode” barcode in the working mode.

Q3:After pressing the button, no beam comes out of the scanner.

A3:Low power. Please charge the scanner.

Bluetooth HID Pairing

Use the scanner to pair with mobile Phone or computer and other devices, follow the steps below:

- ①Use the scanner to scan “Bluetooth HID pairing Code” below. If the Bluetooth is not paired for more than one minute, it will automatically exit and give a three tone prompt.



Bluetooth HID Pairing

- ②Open the Bluetooth device to search for the Bluetooth name “Barcode Bluetooth HID”, and then click Pairing.

Decode Settings

Configuration method: Scan the function bar code directly.

① Defaults Parameter

1.The default setting allows the scanner to be restored to the factory setting state.

2.With "*" in bold means default parameter.



Restore Defaults

② Vibration mode setting



*On



Off

Note: it is effective only when there is a vibration function.

⑥ Communication mode



*Receiver mode



Bluetooth HID mode



Bluetooth BLE mode



Bluetooth SPP mode

Note: Only when the scanner has Bluetooth function related Bluetooth setting code is valid.

③ Working mode

Real time mode: Scan and transmit, data will automatically lost if upload failed.

Cache mode: Same as real time mode if connection normal. Scan bar codes will be automatically restore if connection failed. Will upload one by one if connection return as normal.

Inventory Mode: Scanning bar codes will be restored without upload.

Configuration method: Scan the function bar code directly.



*Real-time mode



Inventory mode



Cache mode

⑦ Bluetooth HID upload speed setting



Fast



*Medium



Low

Note: The function is valid only in Bluetooth HID mode.

④ Inventory Setting

This part is valid for inventory mode only

Upload data: Barcode data will transmit to terminal once scan this bar code.

Date sum: Scan "Data sum" bar code to check the scanner restore data sum.

Clear data: Scan "Clear data" and clear all the restore data in scanner.

Configuration method: Scan the function bar code directly.



Upload data



Data sum



Clear data

⑧ Suffix



None



*0x0D(CR)



0x0A (LF)



TAB



0x0D&0x0A(CR&LF)

⑤ Sleep Time Setting

The sleep time means the time between the last operation and turn off. User able to scan the corresponding barcode of the sleep time which is needed to accomplish the sleep time setting.



No Sleep



Sleep Now



60s



*5min



10min



30min

⑨ Keyboard Language



*US



German



Franch



Spanish



Brazilian